
# PLATEAU **SEAT**

**#195 #200** MOUNTING GUIDE

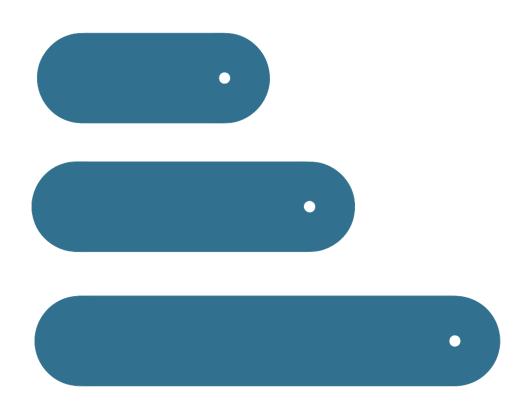



# **PLATEAU SEAT**

Developed by out-sider in collaboration with Holscher Design 2019.

INDEX:	PAGE
Item list	02
Mounting surface bracket	03
Mounting of seat on surface bracket	04
Fixation of disc	05
Plateau side-table	06
Mounting of legs	07
Cleaning and maintenance	08

# **ITEM LIST**

#### **Seat 900**

- 3 pcs M8x100 allen key screw
- 3 pcs M8 nuts
- 3 pcs M8 washer

#### Seat 1250

- 5 pcs M8x100 allen key screw
- 5 pcs M8 nut
- 5 pcs M8 washer

#### **Seat 1800**

- 5 pcs M8x100 allen key screw
- 5 pcs M8 nuts
- 5 pcs M8 washer

#### **Seat 1800**

• 1 pcs M8x20 allen key screw

Tools (not included)


- Allen key set
- Socket wrench set
- Screws and bolts for the mounting of the surface bracket (depends on customer wishes and surface, see p. 04)

#### PLEASE NOTE:

The drawings in this manual show PLATEAU Seat 900 - the small version. The exact same mounting principles are applied to the 1250 and the 1800 versions.


# **ADDONS**


Addons, not included with standard product

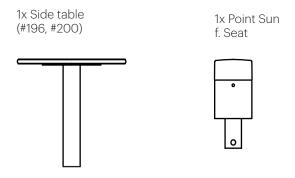

## 1: MOUNTING OF SURFACE BRACKET

The surface bracket needs to be mounted on a surface before its assembled with Seat. The bracket has four holes made ready for surface mounting. Use your preferred bolts or screws to mount the bracket.

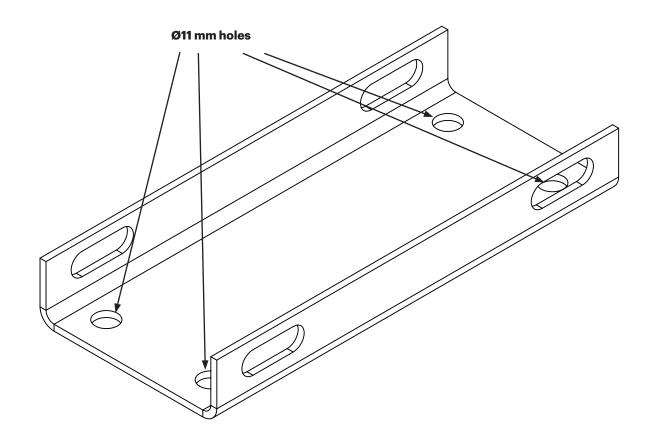

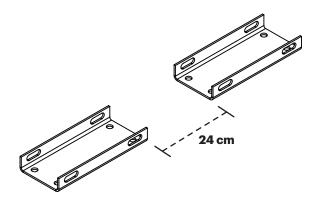


#### **Seat 1250 and Seat 1800**

Make sure the two brackets have the correct distance (24cm) between them, before mounting them to the surface.


## 2: MOUNTING OF SEAT ON SURFACE BRACKET

Use the included M8 x 100mm allen key bolts to fix the sitting surface to the fixated surface bracket. Tighten the bolts and nuts with allen key no 6. and a 17mm spanner tool.

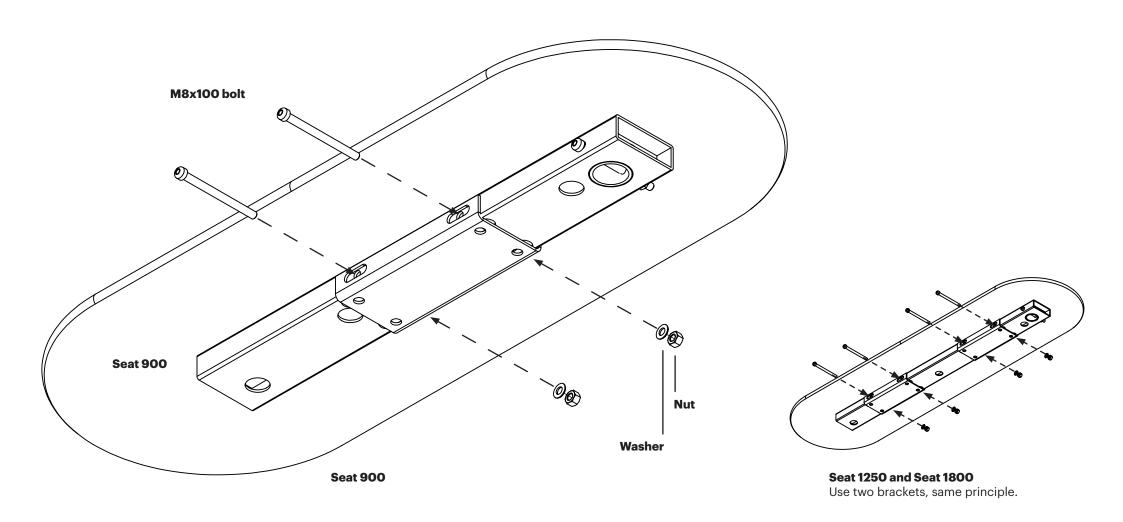

# 3: FIXATION OF DISC

Use one of the included M8 x 100mm unbraco bolts to fix the disc into place. Allen key nr 6.

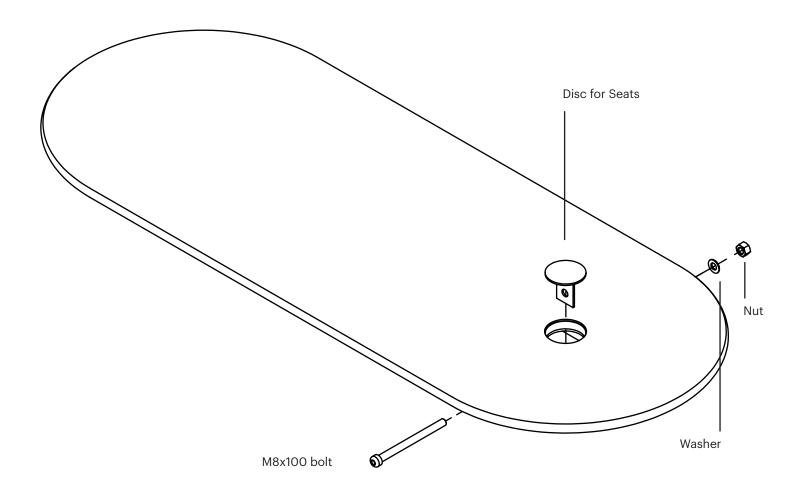



# PLATEAU **SIDE-TABLE** #200

## **MOUNTING OF SIDE-TABLE ON SEAT**

Lower Side-table into the circular slot. Rotate Side-table in such a way, that the two holes align with the steel frame. Reuse the bolts, nut and the washer from your previous disassembly of the disc-tube.


#### **Seat 900, 1250, 1800** Side-table mounted on Seat

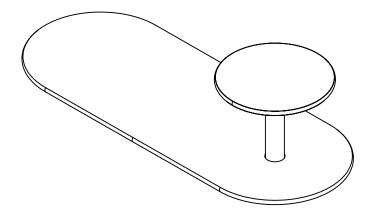

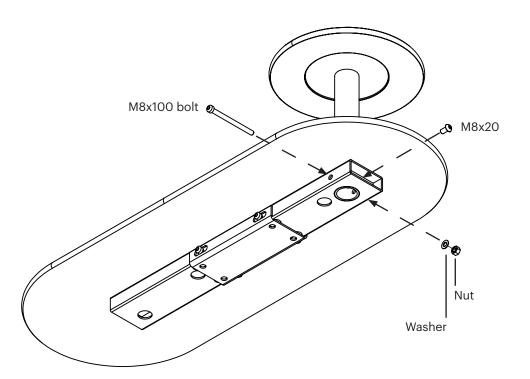

# **MOUNTING OF LEGS**

Use M8x100 and M8 nut to fasten the two legs (204 1010). Out-sider does not provide tools and materials for surface mounting through the top flange, but recommends countersunk M8-M10 bolts.

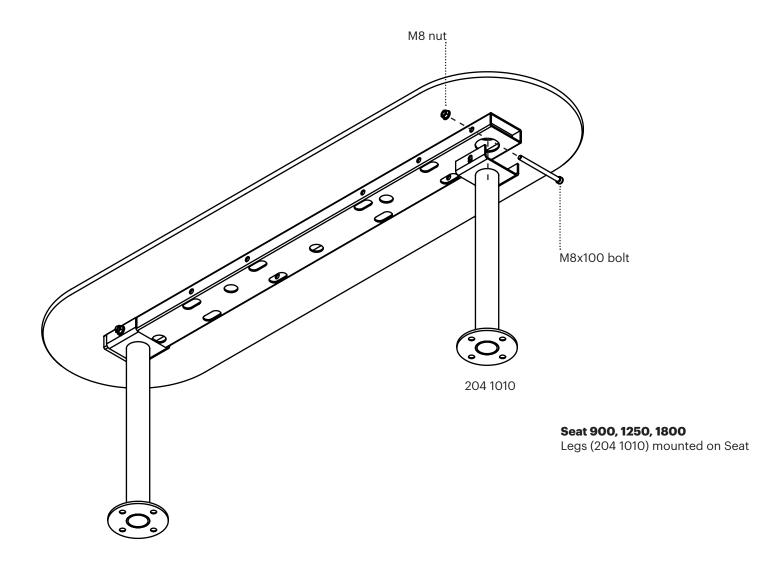

## **CLEANING**

Clean the laminate surface with warm water and a soft sponge.

NEVER use the abrasive "green" side of the sponge. Use an ordinary universal cleaner.

Difficult dirt must be removed with a nano sponge and water. Please take a closer look at our website, or contact us for information.



Kigkurren 8A Islands Brygge DK-2300 Copenhagen

> out-sider.dk +45 77 343 341